





Installation Guide

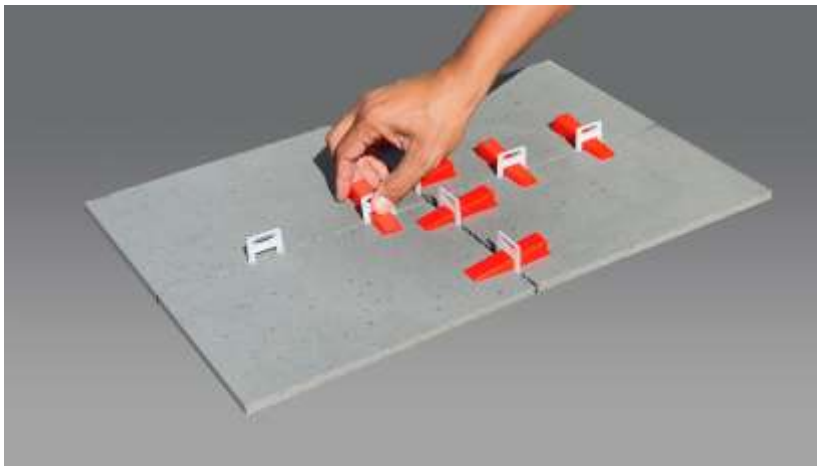

- Start with the first tile according to the tiling layout.
- Ensure that this tile is 100% level.
- Insert Clips as needed depending on the size of the tile.
- Add one clip on each edge about 700mm from the corner.

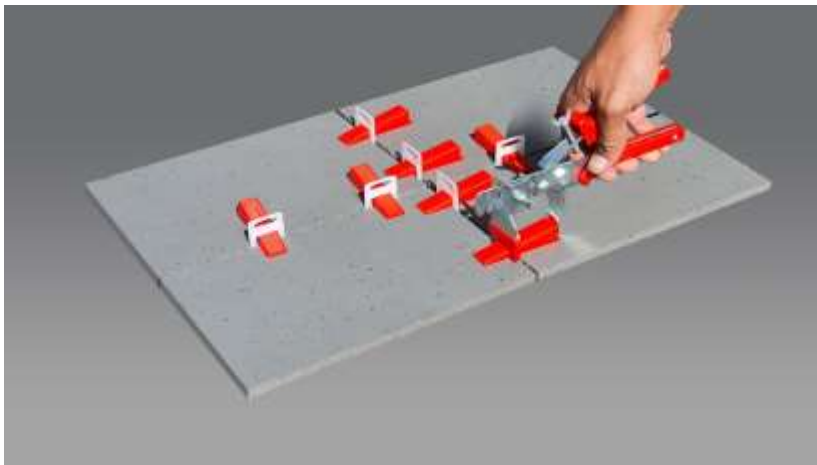

- The Pliers is set at the right torque to ensure the same pressure on each Clip & Wedge combination.
- After tiles are laid and adhesive has cured, knock all Clip & Wedges with a rubber mallet to break the connection.
- Save all Wedges for future installations.
- Grout as normal.